


TORQ
BEATS

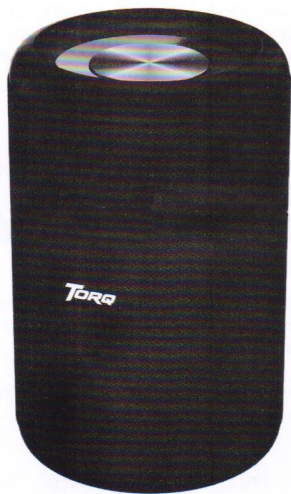

TB409

Thank you for choosing TORQ. Our products are designed with great care to provide the best experience for our customers and we hope you enjoy using them.

1.Package Contents:

- Bluetooth Speaker
- USB Charging Cable
- User Manual

2.Charging the Speaker:

- Connect the provided USB charging cable to the charging port on the speaker.
- Plug the other end of the cable into a USB power source, such as a computer or a wall adapter.
- The LED indicator on the speaker will light up to indicate that it is charging. It may take a few hours to fully charge the speaker.

3.Powering On/Off:

- To power on the speaker, press and hold the power button until the LED indicator lights up. You will hear a sound or see a visual indicator confirming that the speaker is on.
- To power off the speaker, press and hold the power button again until the LED indicator turns off.

4.Pairing with a Bluetooth Device:

- Make sure the speaker is powered on.
- Enable Bluetooth on your device (phone, tablet, etc.).
- In the Bluetooth settings on your device, search for available devices.
- Select the Bluetooth speaker from the list of available devices (it will appear as the TBS414).
- If prompted, enter the pairing code or confirm the connection.
- Once connected, the LED indicator on the speaker will stop blinking or change color to indicate a successful connection.

5.Controlling Playback:

- Use the playback controls on your connected device (phone, tablet, etc.) to play, pause, skip tracks, or adjust the volume. You may increase the volume or Skip tracks by using the Volume buttons on the speaker.

6.Charging the Speaker:

- When the battery is low, you can recharge the speaker using the provided USB charging cable. Follow the instructions in Step 2.

7.Troubleshooting:

- If you experience any issues with the speaker, such as connectivity problems or poor sound quality, try the following steps:
 - Ensure that the speaker and your device are within the Bluetooth range (usually around 33 feet or 10 meters).
 - Turn off and on the speaker and your device.
 - Forget the speaker from your device's Bluetooth settings and pair again.
 - Check if the speaker's battery is fully charged.

All our products come with a 1-year warranty against manufacturing defects, this does not cover unintended use, environmental damage and intentional misuse.