# Torq



WIRELESS OUTDOOR SPEAKER TR79 USER'S MANUAL

## Packing list:









Dual 3.5mm audio cable x1

User manual x 1

## Production structure

1 NEXT/VOL+ 2 PREVIOUS/VOL- 7 AUX in

8.TYPE-C charging port 3.Play/Pause 9.MIC port

4 Mode button 10.USB port 5. Wired microphone 11.TF card port volume button 12.Power switch

6.ECHO



# Operation instruction: Power ON/OFF

1. Turn the power switch to "on", the LED indicator lights up blue for 3s.

2. Turn the power switch to "off".

## Bluetooth mode

- 1. Turn on the Bluetooth speaker. The product is on with Bluetooth mode and enters pairing mode
- 2. Then active the Bluetooth of your phone and search for "TB79". Click manually to connect.
- 3. Since the speaker can automatically reconnect to the last paired device. When the Bluetooth of your device turns on(Just turn on the speaker), it will automatically reconnect.
- 4.Long press the play/Pause button to disconnect the Bluetooth connection

# Music playing

- 1. Short press the Play/Pause
- 2.Long press the "@"for PREV;
- 3. Long press the "> "for NEXT.

4. Short press the" (▼"for VOL-;

5. Short press the "" for VOL+.

## Mode switching

Long press the Mode button to select mode Short press the mode button to switch the light mode8 (Five light modes, the last time to turn off the light)

#### **AUX** mode

Connect your music player/phone to the speakers via the included dual 3.5mm audio cables and the speakers will automatically recognize and automatically play music in MP3 format.

## **USB** mode

Insert a USB disk, the speaker will automatically recognize and automatically broadcasts MP3 format music in it.

#### TF mode

Insert a TF card, the speaker will automatically recognize and automatically broadcasts MP3 format music in it.

#### MIC function

Insert a microphone(6.35mm) to the mic jack to enter mic function.

#### Microphone mode:

A: When a wired microphone is plugged in, press the microphone volume button to change the volume of the microphone. Three gears to choose from

B: In the case of wired microphone, short press the reverberation button to change the mode of mixing low, middle and high. Three gears can be selected

## Charging

- 1.As product has built-in non-removable and rechargeable battery, please use the provided TYPE-C cable to charge.
- 2. Please choose the charger that is certified by the regular manufacturer.
- The battery performance may decrease as repeating charging and using the speaker. It's a normal phenomenon for all rechargeable batteries.
- 4. The power LED indicator turns red when

charging and goes out when fully charged.

### Specification:

Bluetooth version: V5.3 Speaker: 78mm\*2 Output power: 20W\*2 Battery: 7.4V/3600mAh

Play time: 8-10H (Medium volume)

Charging time: 4H

Support: Wired microphone jack

Wireless working range: 10M (without

obstacles)

Input voltage: DC 5V/1A Charging method: Type-C

Net weight: 1.3kg Product size: 278\*123\*126mm

Material: ABS+ metal mesh

#### Warnings

- 1. Please follow the instruction to operate.
- 2. Please charge the product with input power below 5V/1A, in order to protect the battery;
- 3. Please do not use this product in the near water. Do not immerse this product in any

- liquid or splash any liquid on this product.
- 4. Please store or use the product in a normal temperature environment.
- Please keep the product from heat source, such as radiators, hot air regulators, stoves, or other heat generating instruments. As it is not anti-high temperature.
- 6. Don't jam the ports of the product, such as charger port, LED port and microphone etc.
- 7. In order to protect your hearing and extend the speaker service life, it is not recommended to adjust the volume to the maximum level for a long time.